

Montero 3rd Row Window Storage System Installation Instructions



View these instructions in color:

1. First install the aluminum cylindrical pipe onto the face of the bottom bracket using the short black bolts provided.



2. Remove the screws of the handle with a plastic cleat, and then use the provided long silver bolts to install the upper bracket.



3. Hang the side panel on the upper bracket, line up the bottom bracket with the 2 corresponding bolt holes on the side panel and mark its location on the vehicle.



4. Remove the side panel, use an included adhesion promoter to wipe the installation area, then affix the bottom bracket along the mark drawn in step 3, and then press firmly.



5. Attach the side panel to the top and bottom brackets loosely and then once all bolts are installed they can be tightened. The side panel installation is now complete.




6. **Horizontal Shelf Installation (if applicable)** – There are 4 available positions (Upper, Middle, Lower, and Front/Vertical). Install the angle iron bracket using the provided wing bolt hardware. *Not needed for the Lower position as the bracket can be attached directly to the side panels.




7. Crossbar Orientation – The front bar has 4 hole that need to face forward and 6 downward. The rear bar's 6 holes will all face downward. See step 11 for an illustration.



8. Place the two crossbars directly onto the brackets without screwing them in.

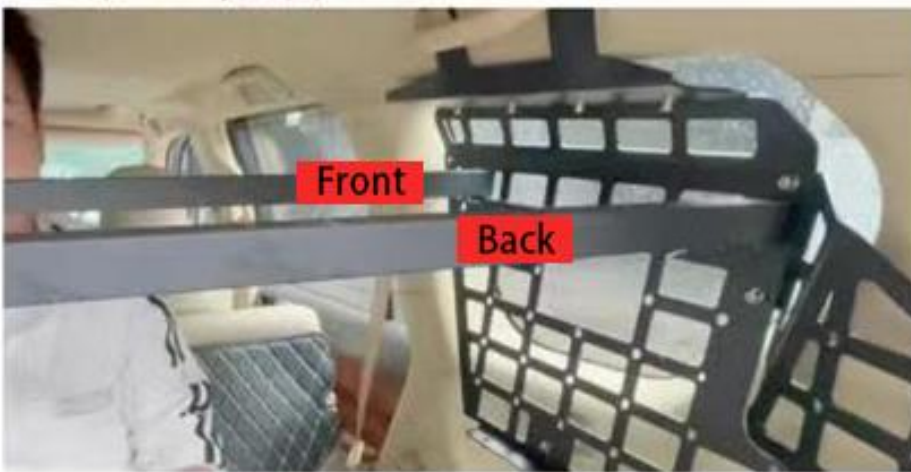

9. Place the shelf halves under the crossbars and onto the side brackets.

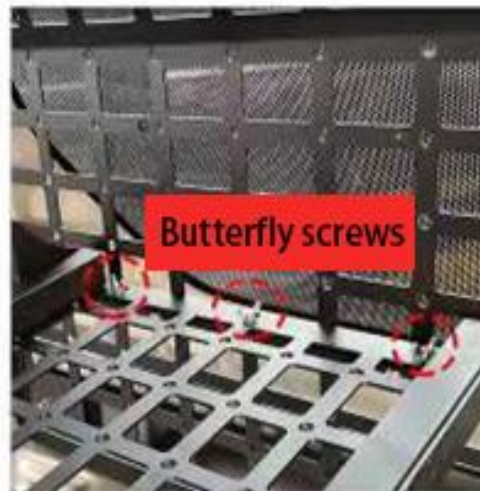

10. Loosely install all hardware and then tighten. There are 4 bolts needed at the front (yellow), 12 on the bottom (red), and 6 wing bolts (green) on the sides. Installation is now complete. If needed, the entire shelf can be removed easily by removing just the wing bolts on the side.



Example of Shelf installed at the lowest position:

